
HP-4 Recessed Flush Diffuser Tech Zone 6" Starter/Independent Installation Instructions

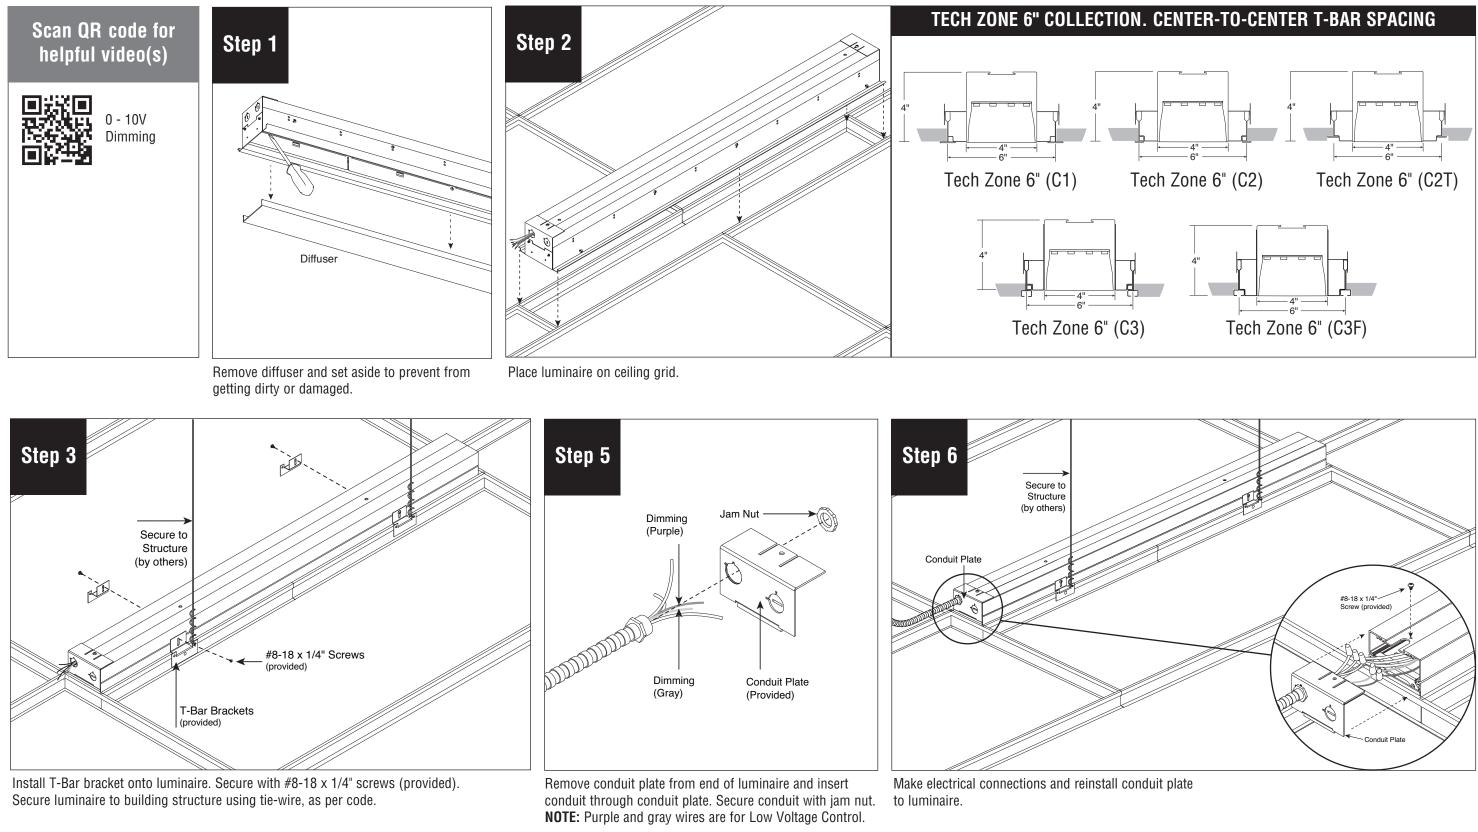

Note: All power connections to be installed to local/national codes by a Certified Electrician.


Finelite, Inc. • 30500 Whipple Road • Union City, CA 94587-1530 • (510) 441-1100 • Fax: (510) 441-1510 • www.finelite.com

Better Lighting

FINELITE[®]

0 2017 FINELITE, INC. ALL RIGHTS RESERVED. Foarm 98147 V2. 04/17

HP-4 Recessed Flush Diffuser Tech Zone 6" Starter/Independent Installation Instructions

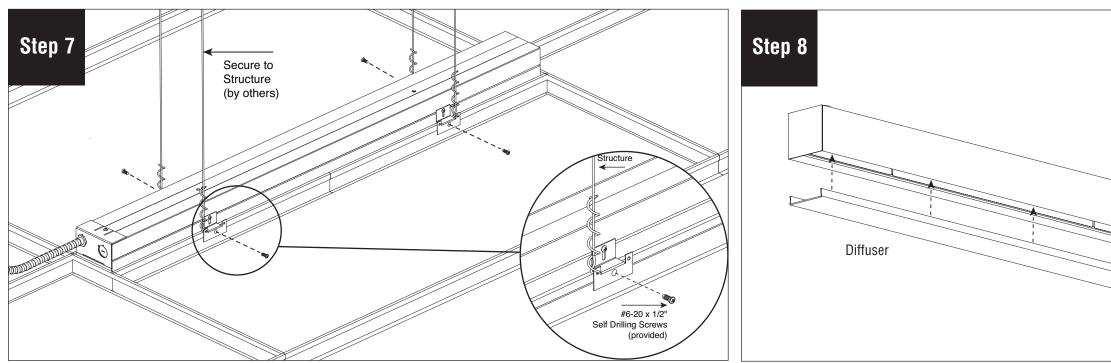


Secure luminaire to T-Bar by driving #6-20 x 1/2" self drilling screws (provided) through the T-Bar brackets (provided) into the T-Bar.

Reinstall diffuser and turn power on to luminaire. **NOTE:** If part of a longer run, diffuser will be reinstalled back into original luminaire section as lengths vary.





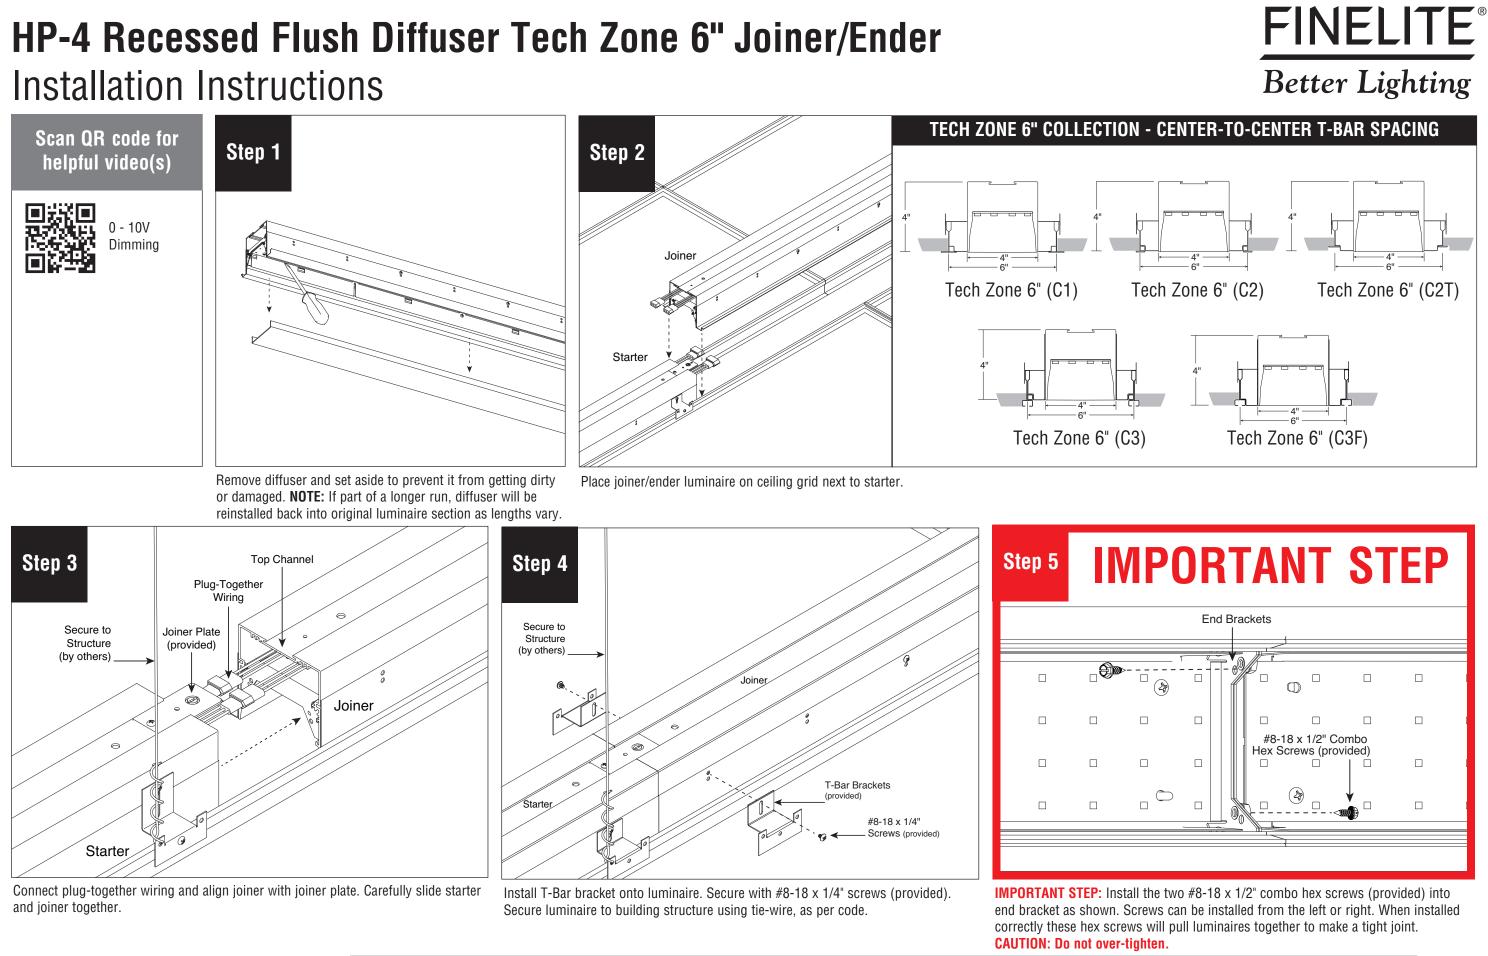


Note: All power connections to be installed to local/national codes by a Certified Electrician.


Finelite, Inc. • 30500 Whipple Road • Union City, CA 94587-1530 • (510) 441-1100 • Fax: (510) 441-1510 • www.finelite.com

732

HP-4 Recessed Flush Diffuser Tech Zone 6" Joiner/Ender Installation Instructions

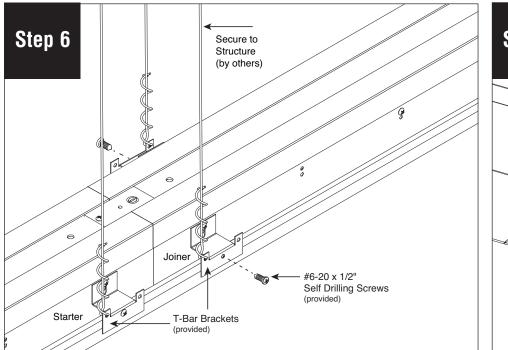

Secure luminaire to T-Bar by driving #6-20 x 1/2" self drilling screws (provided) through the T-Bar brackets (provided) into the T-Bar.

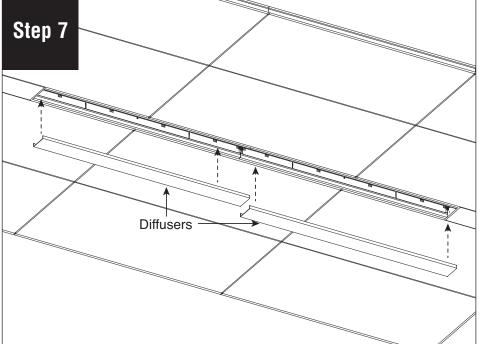

Reinstall diffuser and turn power on to luminaire. **NOTE:** If part of a longer run, diffuser will be reinstalled back into original luminaire section as lengths vary.

