

HPR-SL Room Side Access Overview

NOTES


- All power connections should be installed according to local/national codes by a Certified Electrician.
- This installation requires **proper support** as each luminaire is being installed.



HELPFUL
VIDEO




Diffuser
Removal

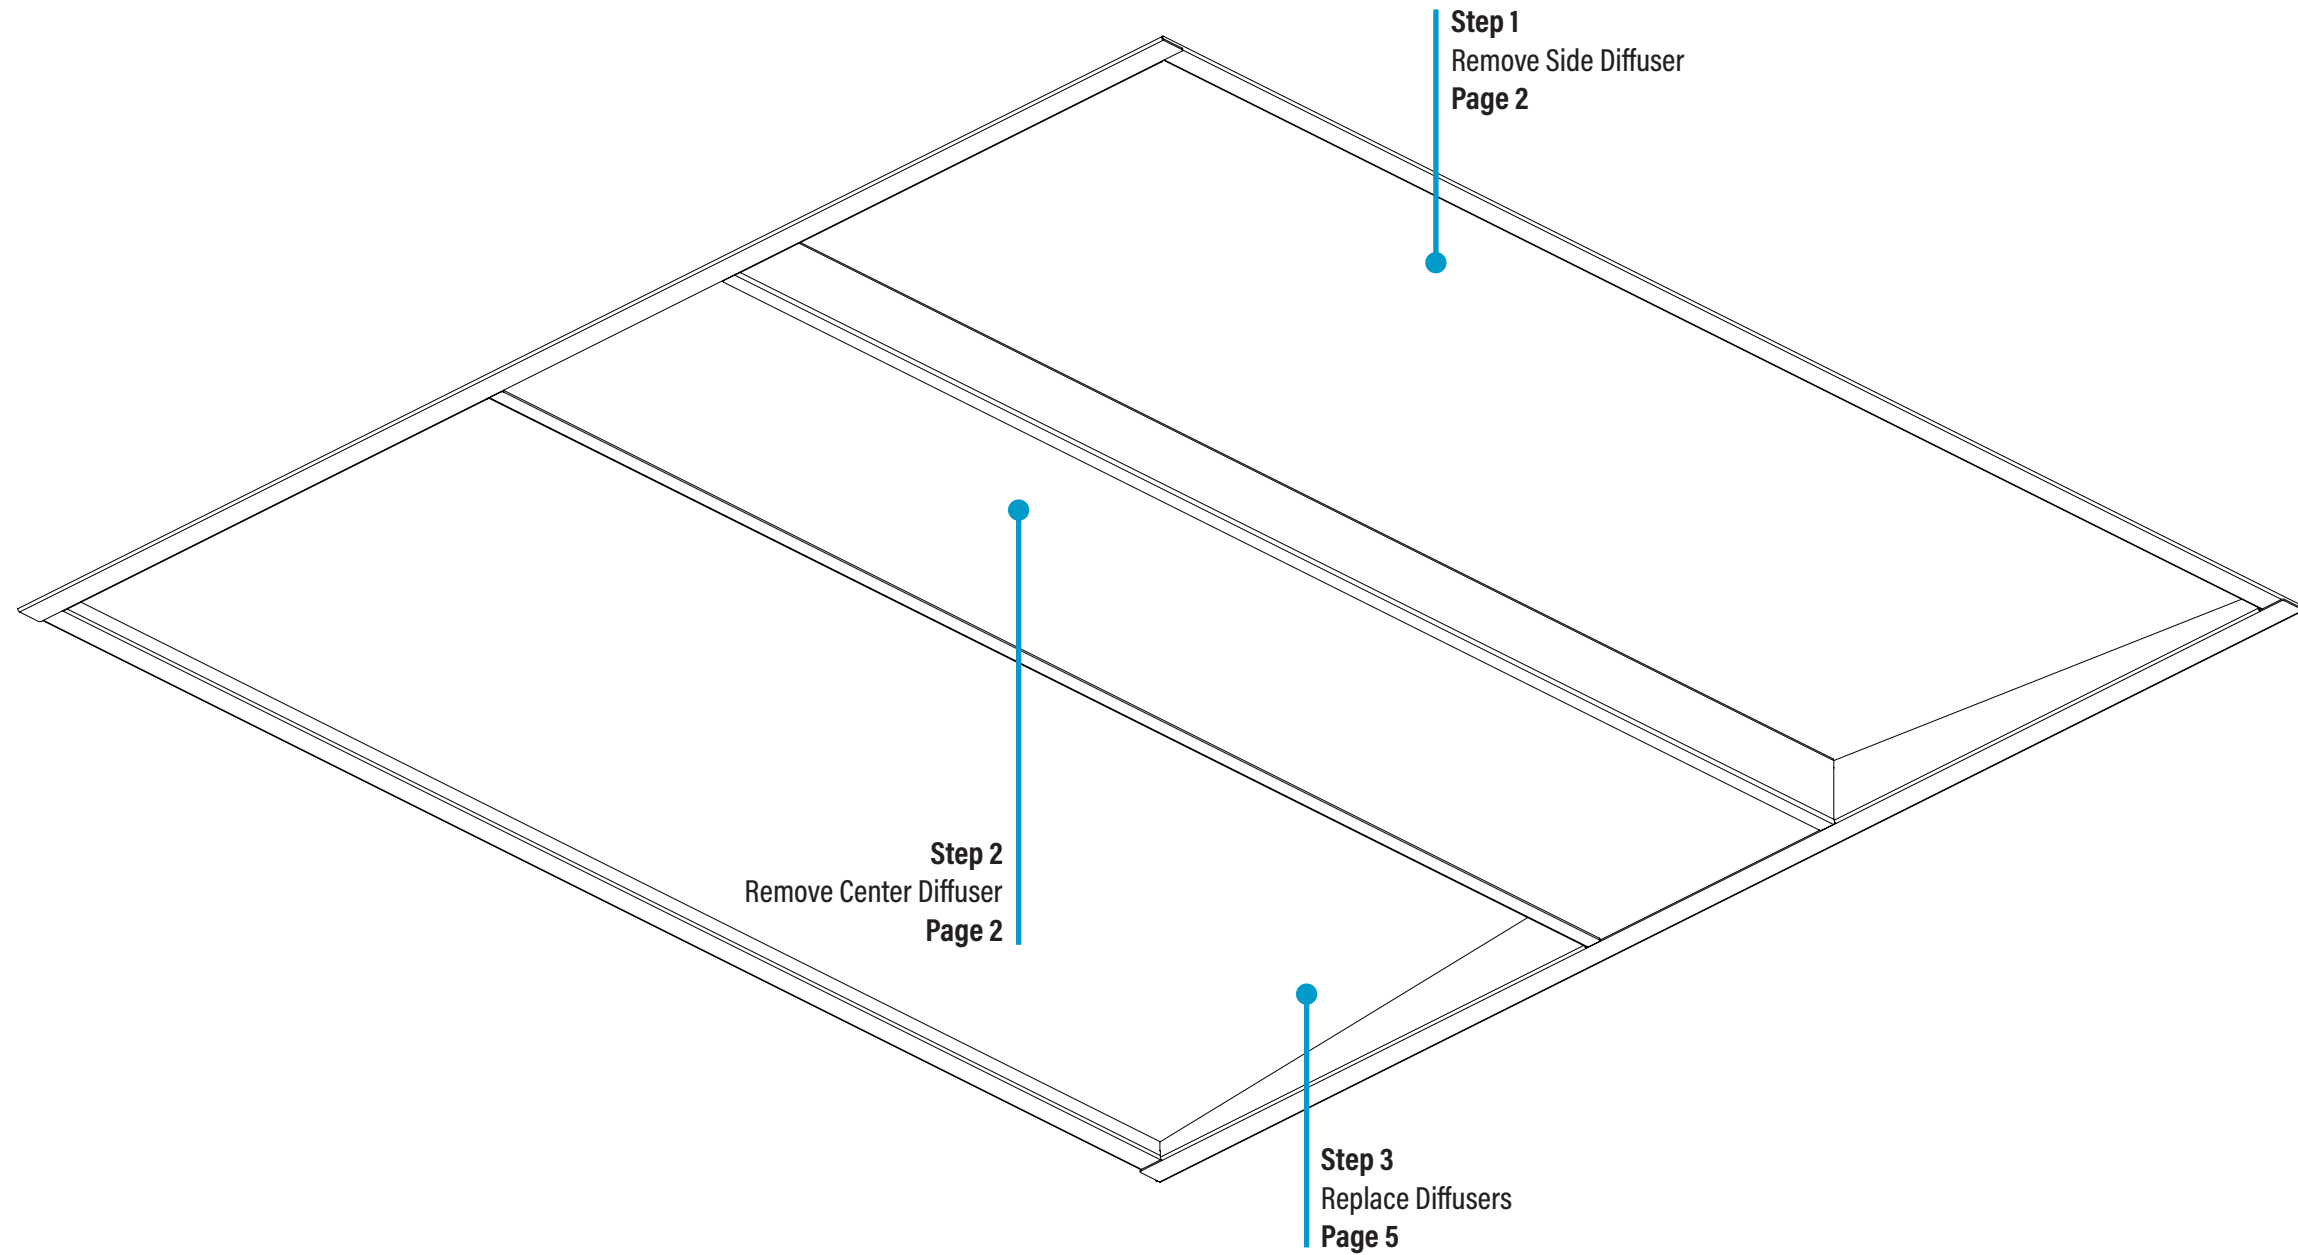

HPR-SL Room Side Access


Step 1 - Open Side Diffuser

A. Identify Driver Side Bottom-Up View

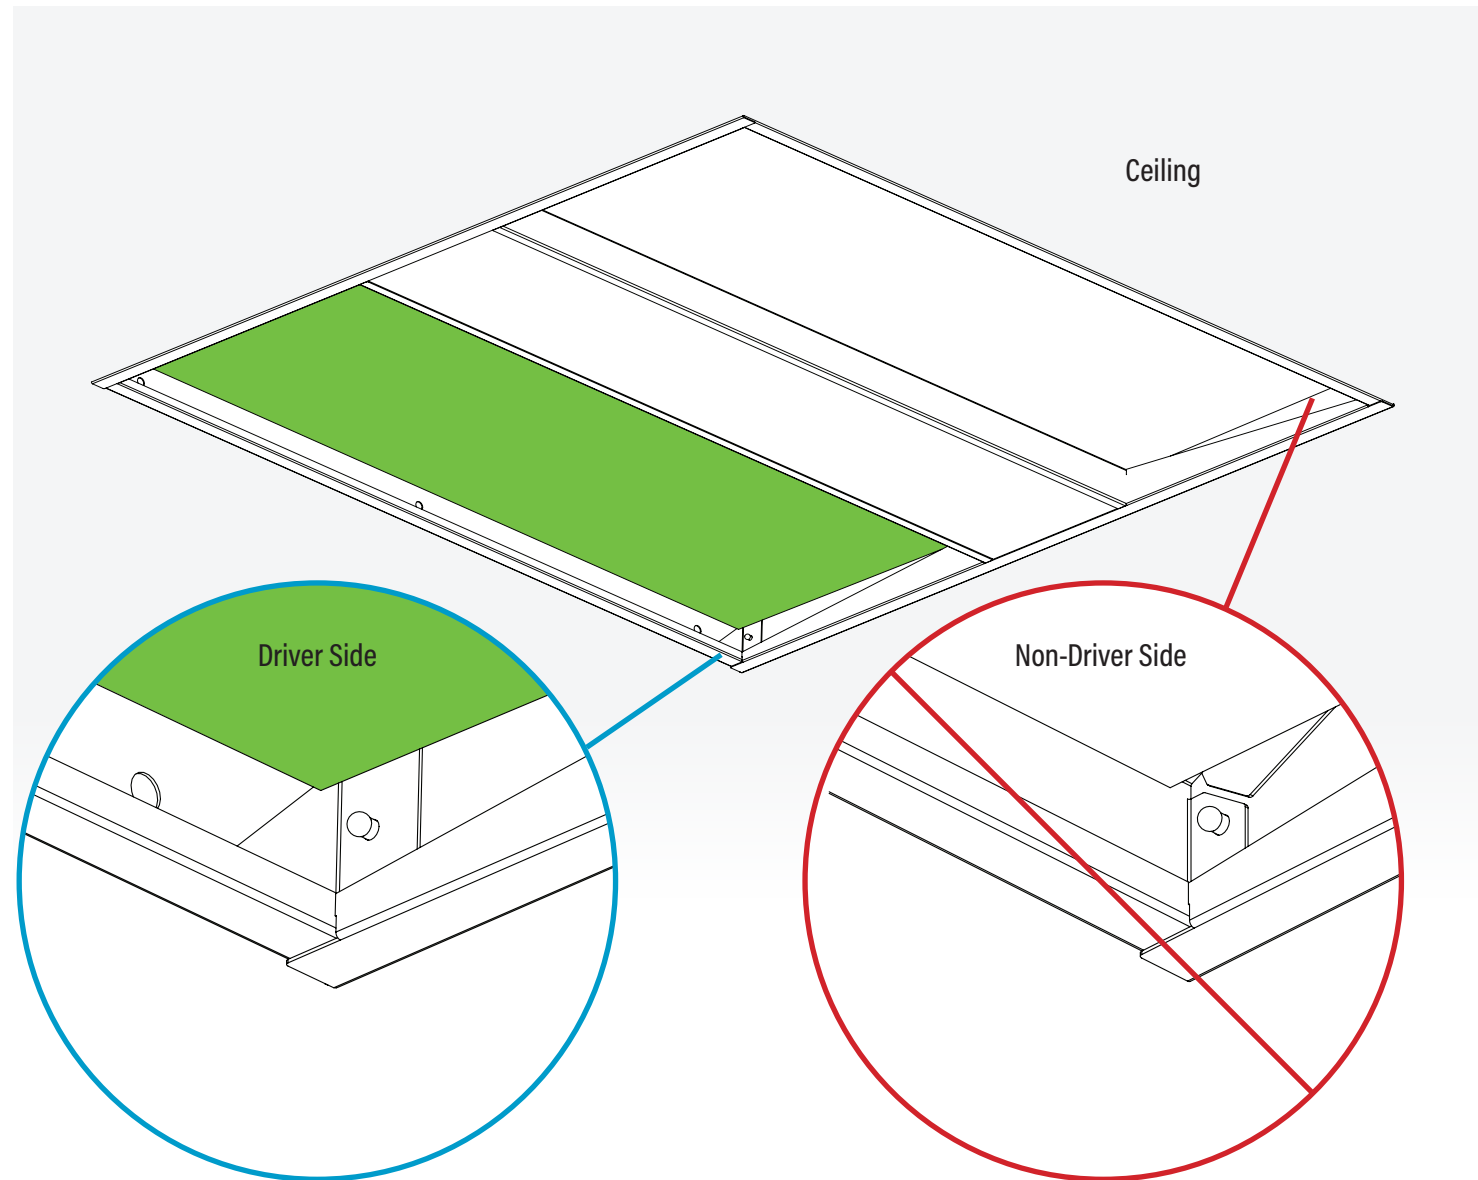

- Gently push up corner of diffuser.
- Identify the driver side.

B. Release Tabs Bottom-Up View

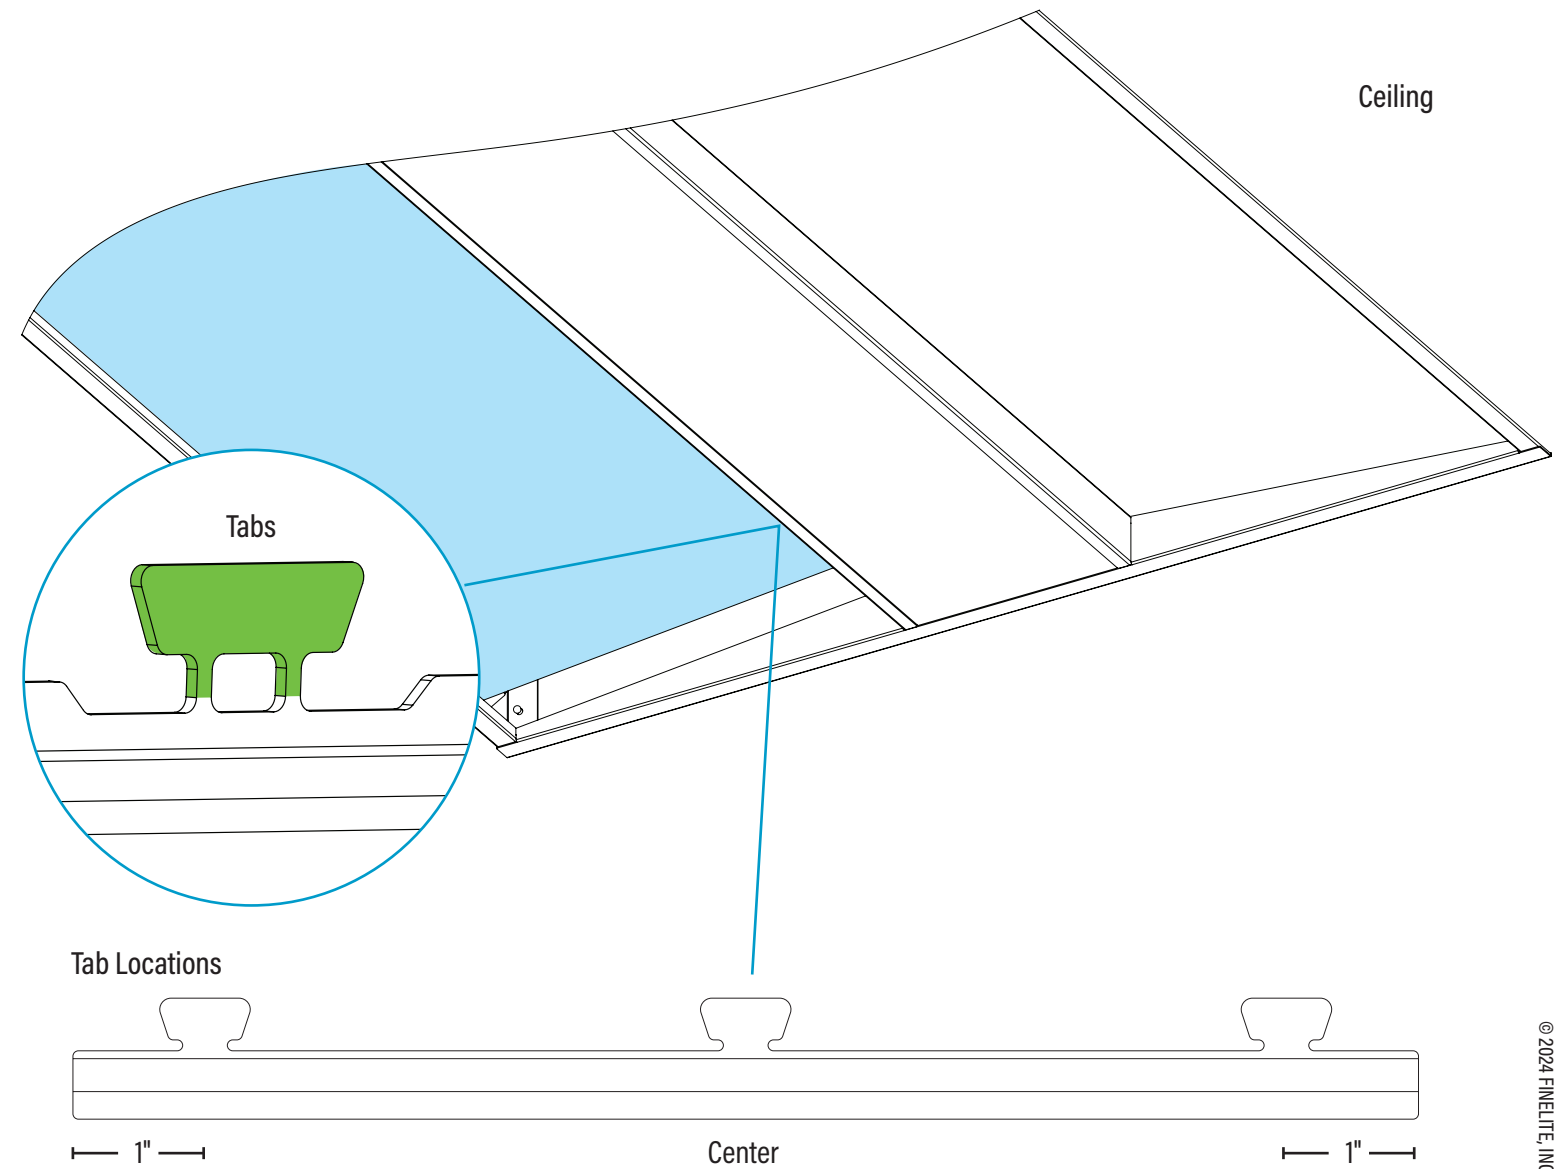


- Push up diffuser from center releasing from three tabs on luminaire
- Side tabs are located 1" from housing sidewall. Middle tab is located at center point of rail



HPR-SL Room Side Access


Step 1 - Open Side Diffuser

C. Slide Diffuser Bottom-Up View

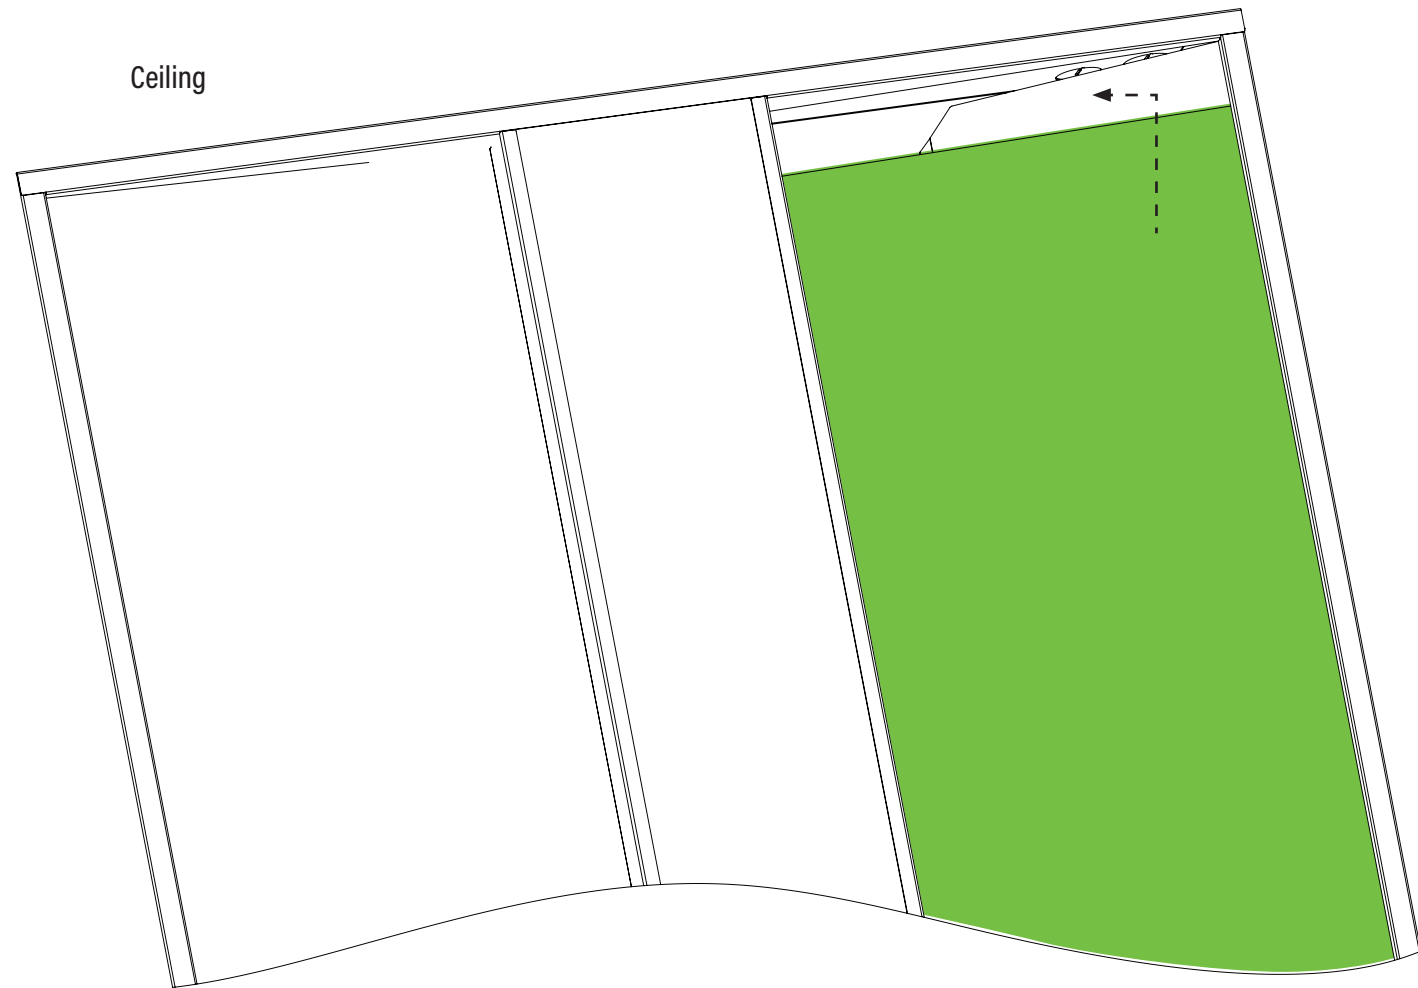

- Slide the diffuser up and to the side.
- Do not push the diffuser all the way up.
- One of the corners of the diffuser will be loosened.

D. Remove Diffuser Bottom-Up View

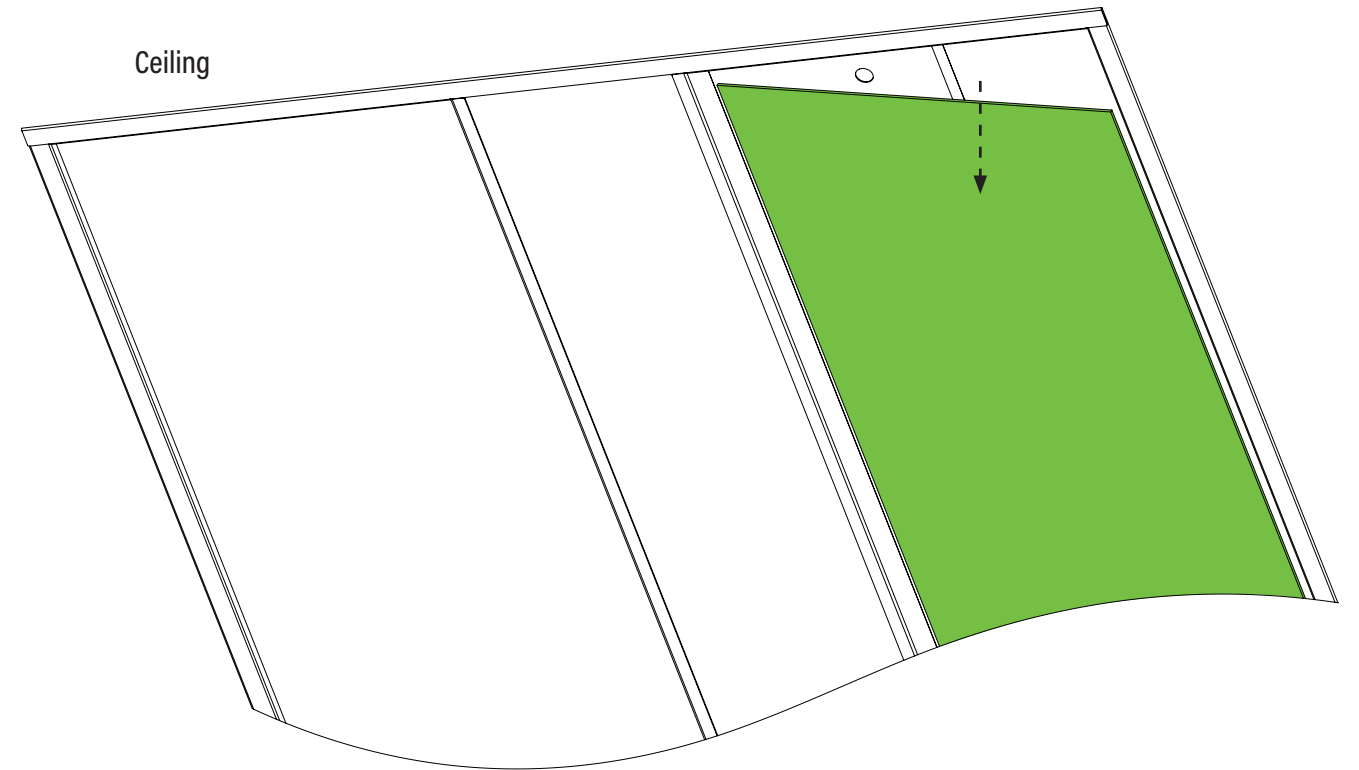

- Carefully pull down the diffuser and slide it out.




Diffuser
Removal

HPR-SL Room Side Access


Step 2 - Open Center Diffuser

A. Lift Diffuser Bottom-Up View

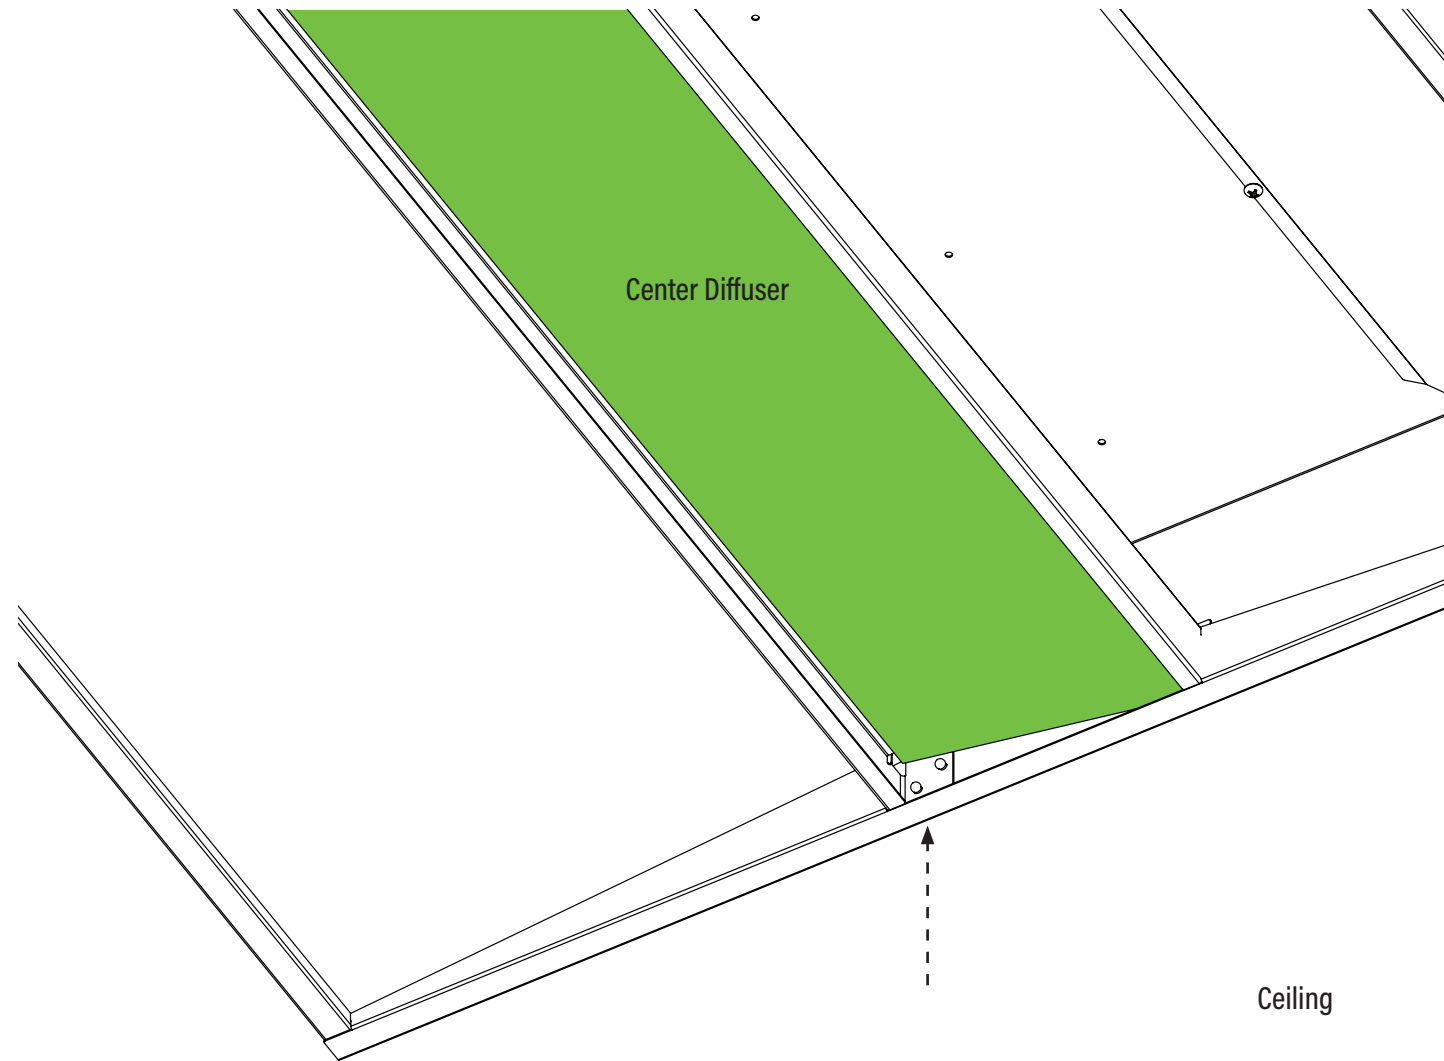

- Start by pushing one corner of the center diffuser past the trench above at an angle
- Push the rest of the center optic diffuser through the trench above from an angle.

B. Remove Diffuser Bottom-Up View

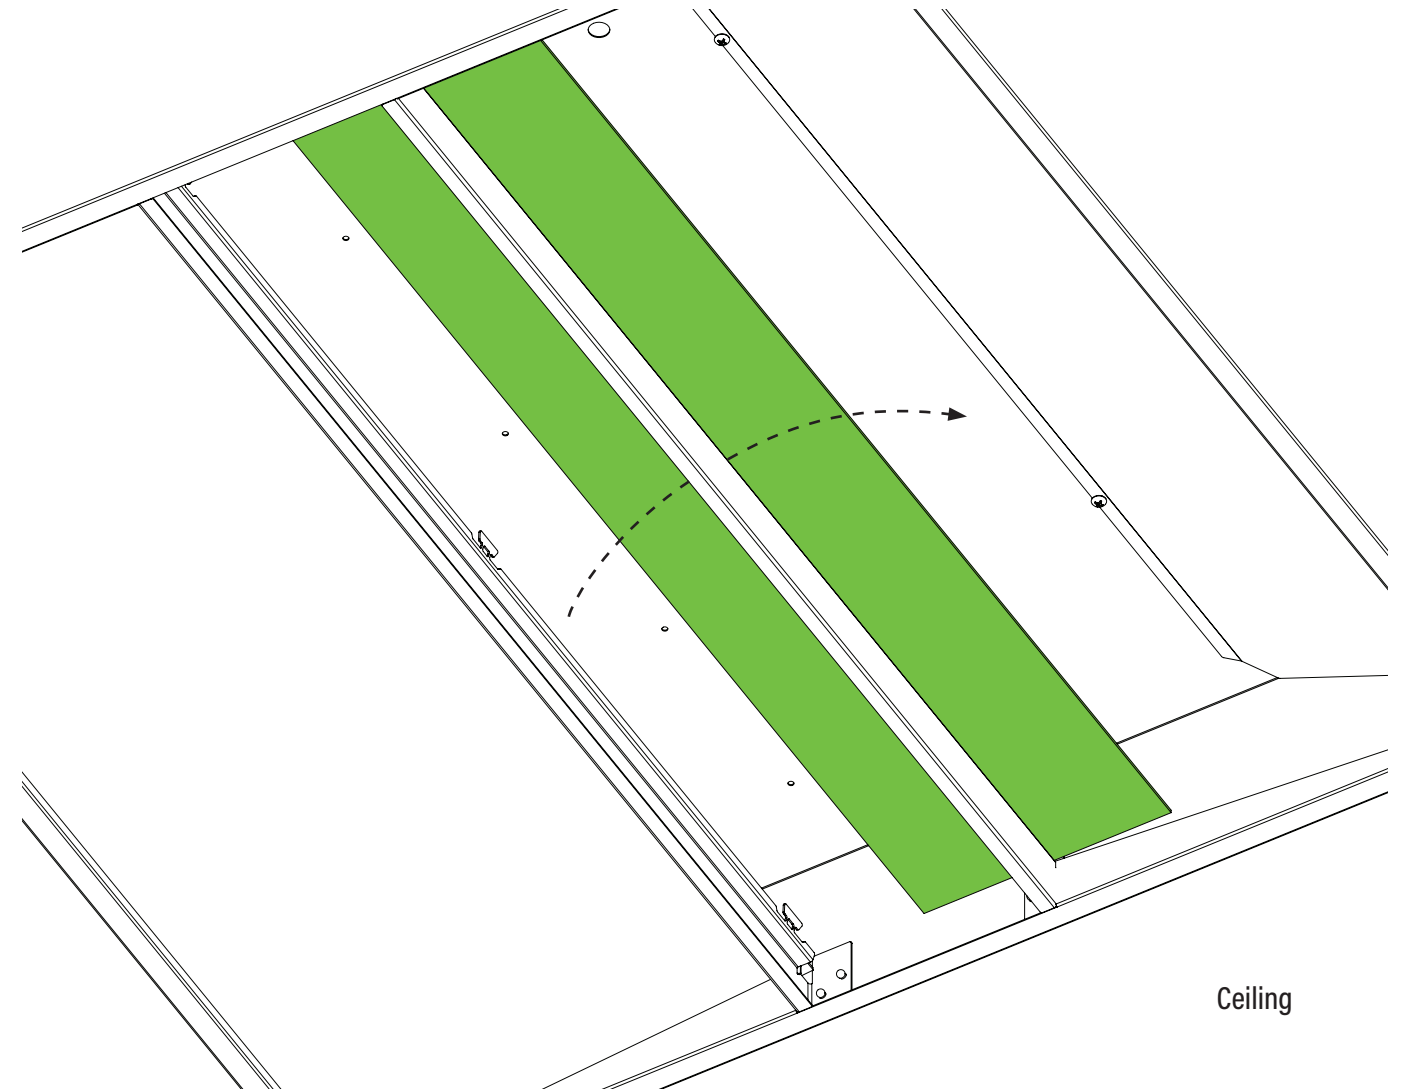


- Slide the diffuser through the opening to remove the diffuser.
- Prevent diffusers from getting dirty or damaged.



HPR-SL Room Side Access


Step 3 - Replace Diffusers

A. Replace Side Diffuser Bottom-Up View

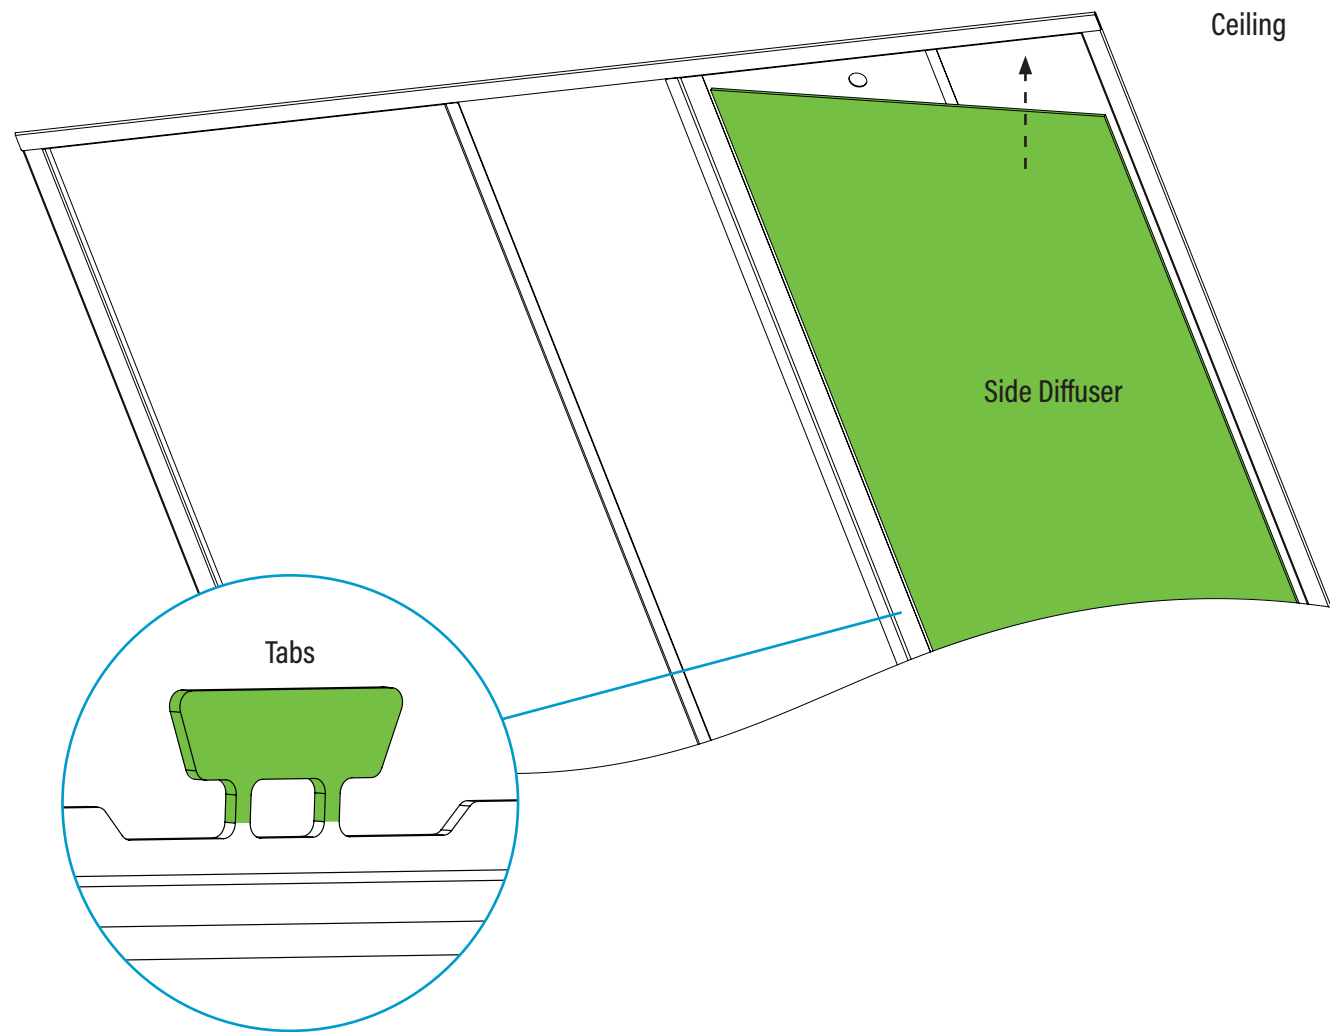

- Ensure the tabs are fully open before replacing side diffuser.
- Carefully replace the diffuser by sliding it into the fixture
- Bend all three tabs to secure the diffuser.

B. Replace Center Optic Bottom-Up View

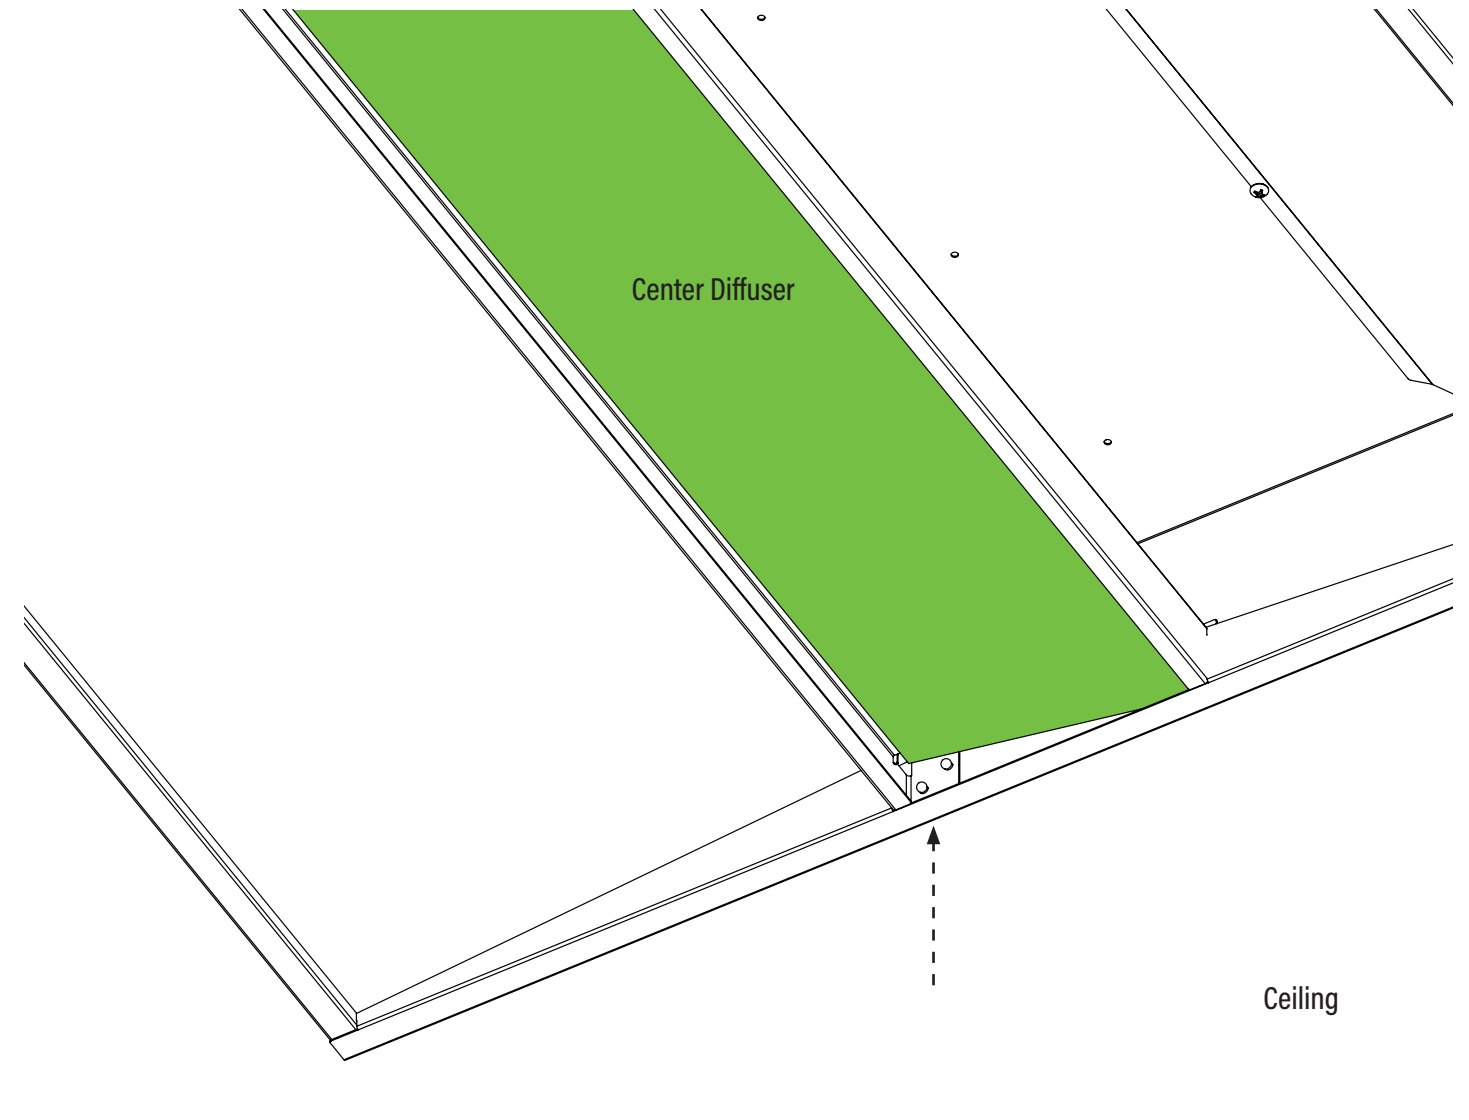

- Gently slide the center optic into the fixture and make sure it is secure.



Diffuser
Removal